

PFC FrontEnd™

Power Factor Corrected 384V AC-DC FrontEnd



Design Guide

and

“Quick Install” Instructions



www.vicorpower.com

TABLE OF CONTENTS

Overview of Product.....	3
Part Numbering.....	3
Mechanical Considerations.....	3
PFC FrontEndDo's and Don'ts.....	4
Technical Description.....	5
Quick Install Instructions.....	6
Mechanical Drawings.....	8
PFC FrontEnd and DIN Rail mouting.....	11
Interface Connections.....	10
Connections to modules and ViPAC Arrays.....	13
Output Power Derating.....	14
Specifications.....	15

PFC FrontEnd™

Power Factor Corrected 384V FrontEnd

Overview

The PFC FrontEnd is an extremely low profile, 384V, 1 RU enclosed chassis mount AC FrontEnd that may be used with any Vicor 300V VI-200/VI-J00 or 375V Maxi, Mini, Micro modules or ViPAC Arrays (see page 13 for connection to module and ViPAC array drawings) to create a complete, high density AC-DC power supply. It can provide up to 4 unisolated outputs (additional using "Y" adapters). Accepting universal input voltages of 85 Vac to 264 Vac, and 100 to 380 Vdc, the PFC FrontEnd can deliver up to 2,200 W in a package size of 1.72" H (43,6mm) x 6.4" W (162,6mm) x 7" L(177,8mm).

Standard Features

- Power Factor Correction: 0.99 at 115 Vac; 0.95 at 230 Vac
- Universal Input: 85-264 Vac, 47-800 Hz, or 100-380 Vdc
- Power Output: 1,100W at 115 Vac; 2,200W at 230 Vac
- Output voltage: 384 V (\pm 3%) non-isolated
- Four connectors to the common non-isolated output bus
- Fan cooled (variable fan speed cooled)
- Rugged: Meets Mil-Std-810E, category 10, Minimum integrity test for Vibration
- Full power to 45°C; half power at 65°C
- Conducted EMI: EN 55022 Class A
- Harmonic Distortion complies with EN61000-3-2
- AC Power OK status signal
- Size: 1.72" H (43,6mm) x 6.4" W (162,6mm) x 7" L (177,8mm)
- RoHS compliant
- Temperature controlled/Auto shutdown
- Safety Agency Approvals: CE Marking, cTÜVUs

Optional Features

- DIN rail mounting (#19-130060) - see page 9
- Connector kit available (#19-130059)
- ViPAC array adapter (#19-130064)


Part Numbering

PFC FrontEnd **FE375-1**

Mechanical Considerations

The PFC FrontEnd can be mounted on one of three surfaces using standard 8-32 (4 mm) size screws. Maximum allowable torque is 4.4 in. lbs., and the maximum penetration is 0.16 in. (4mm).

When selecting a mounting location and orientation, the unit should be positioned so air flow is not restricted. Maintain a 2" (5,1cm) minimum clearance at both ends of the PFC FrontEnd, and route all cables so airflow is not obstructed. The power supply draws air in at the fan side and exhausts air out the same side. If airflow ducting is used, avoid sharp turns that could create back pressure. The fans move approximately 20 CFM of air.

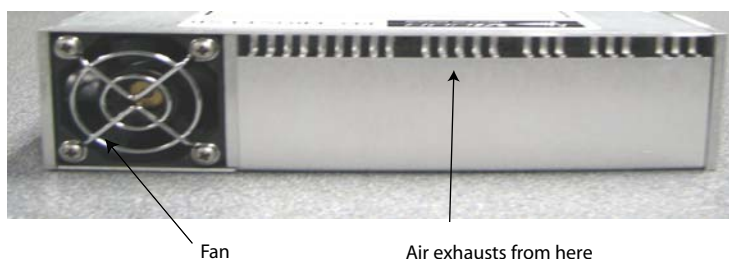

Avoid excessive bending of output power cables after they are connected to the output terminals. For high-current

outputs, use cable ties to support heavy cables and minimize mechanical stress on connectors. Be careful not to short-out to neighboring outputs. The maximum torque recommended on output nuts is 10 in. lbs.

Avoid applications in which the unit is exposed to excessive shock or vibration levels. In such applications, a shock absorbing mount design is required.

PFC FrontEnd Do's and Don'ts

- Always turn the power supply off, before disconnecting input or output wires.
- Do not restrict airflow to the unit. The cooling fan draws air into the unit and forces it out at the output power terminals.
- Run the output (+/-) power cables next to each other to minimize inductance.
- Do not repair or modify the power supply in any manner. Doing so will void the warranty. Contact Factory.
- Insert proper fault protection at power supply input terminals (i.e., a fuse).
- Use proper size wires to avoid overheating and excessive voltage drop.

Technical Description

The PFC FrontEnd consists of an off-line single phase, power-factor-corrected front end, EMI filter, cooling fan, customer interface and associated housekeeping circuits.

Input AC mains voltage is applied to a terminal block. The input current is passed through an EMI filter designed to meet conducted noise limit “A” specifications in FCC Part 15 and EN55022, Class A.

At start-up, inrush current is limited by a PTC thermistor. The PTC is shunted out shortly after initial power-up by a DC bus voltage sense circuit driving a relay. After rectification, the input voltage is put through a boost converter that keeps the AC input current sinusoidal and synchronized with the input AC voltage (in compliance with EN61000-3-2). The boost converter delivers a regulated input to the hold-up capacitors and a high voltage back-plane.

At initial power-up, the PFC FrontEnd output control lines are disabled to limit the inrush current and to allow the DC bus potential to settle out to the correct operating level. A low-power flyback converter operating with PWM current-mode control converts the high voltage DC bus into regulated low voltage to power the internal house-keeping circuits and DC cooling fan.

The internal housekeeping Vcc comes up within 2 s after the application of input power. Once the high voltage bus is within operating limits, the AC Power OK signal asserts to a TTL "1," indicating the input power is OK, and enables the power outputs. An auxiliary Vcc output of 5 Vdc sourcing up to 0.3A is provided for peripheral use.

An output Enable/Disable function is provided by using an optocoupler to control the converters that are used in conjunction with the unit. If the Enable/Disable control pin is pulled low, the optocoupler turns on and disables the downstream module output. Please note that this does NOT disable the 384V. The nominal delay associated for a converter output to come up when measured from release of the Enable/Disable pin is 5-10 ms. The General Shutdown function controls all outputs simultaneously and works in a similar manner.

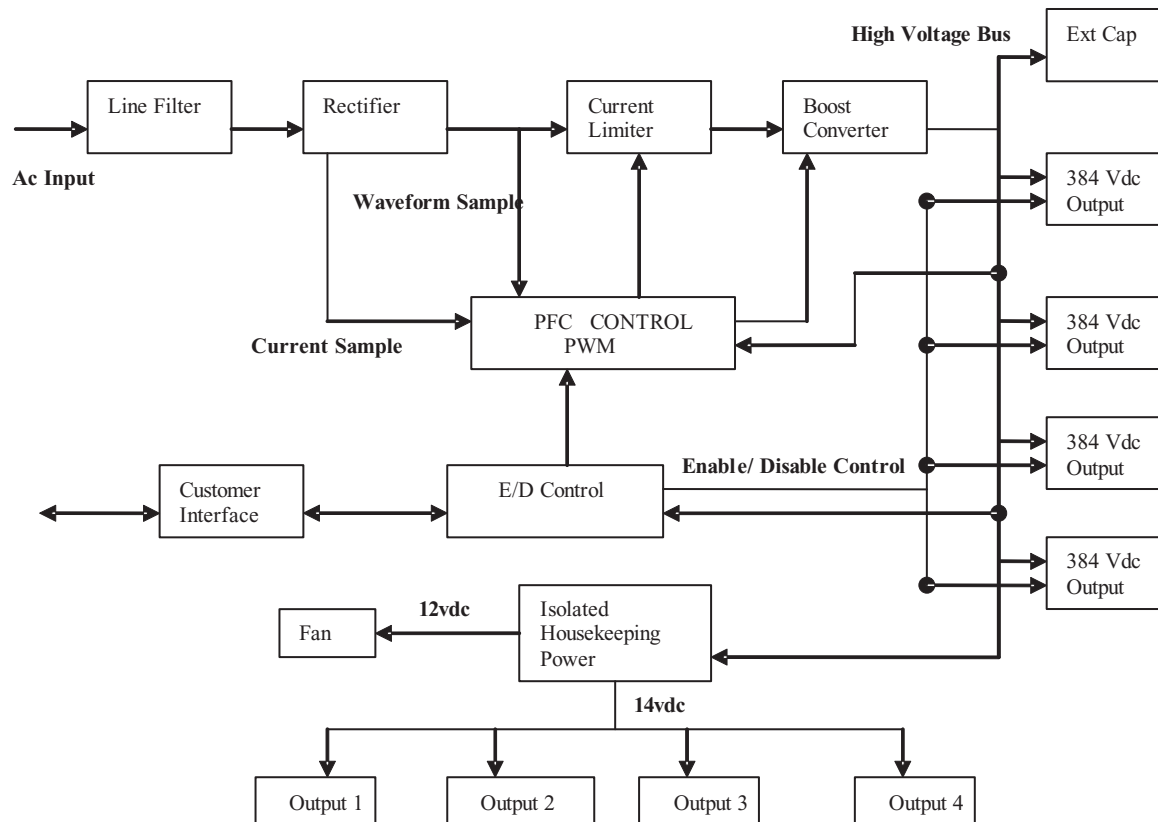


Figure 1 - PFC FrontEnd Architecture

PFC FrontEnd“Quick Install” Instructions (See pg 8 for mechanical drawings)

Mounting the PFC FrontEnd


- * Mount the PFC FrontEnd on one of three sides.
- * Use #8-32 or 4mm mounting screws. Maximum penetration should not exceed 0.16" (4mm).
- * Maintain 2" (5,1cm) clearance at both ends of power supply for airflow. Mounting the PFC FrontEnd with DIN rails
- * The PFC FrontEnd can be mounted to a standard 35mm DIN rail using optional mounting kit # 19-130060
- * DIN rail kit can be attached to the bottom or one side of the PFC FrontEnd
- * Use #4-40 mounting screws. Maximum penetration should not exceed 0.25"

Input Connections

Input Power MBJ6

- * AC power is applied to MBJ6 through a mating molex connector
- * Maximum torque is 5 in lb
- * Place a fuse or circuit breaker in the input line for safety requirements.
- * Using Molex mating connector 39-01-4051 with socket pin 44476-3112 (using 16AWG) and crimp tool 11-01-0199.

MBJ6

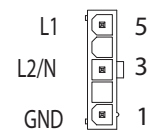

HOUSING: MOLEX P/N: 39-01-4051
 TERMINALS: MOLEX P/N: 44476-3112 (16 AWG)
 CRIMP TOOL: MOLEX P/N: 11-01-0199

Output Connections

 
Power Connections

Output Connectors (MB J1 -J4)

- * Provide connection to the 384V common output power bus
- * Provide individual connections to output module enable/disable lines. These are controlled by input lines E/D 1-4
- * See mechanical drawing for appropriate Molex crimp tool information. 4 mating connectors are provided with each supply
- * Minimum wire size 20AWG

OUTPUTS I THRU 4

384 VDC - E/D 14VDC



HUB connector (MBJ5)

- * In case increased holdup time is needed, this provides a modular connection to an external hold up box. A maximum of 1640uF can be added
- * Used Molex mating receptable 39-01-2040 (4 positions) with #39-00-0039 terminals.
- * Attach 18-24 AWG stranded wire using Molex tool #11-01-0197
- * One mating connector is provided with each supply

MBJ5

(EXTERNAL CAP)

 


Auxiliary Power connectors (CBJ1 - J4)

- * Provide connection to a common 14V auxiliary power output
- * Provides fan power when used in conjunction with output units
- * Can source a maximum of 1.5 amps in total
- * Used Molex mating receptable 39-01-4030 (3 positions)/39-01-4040 (4 positions) with #39-00-0039 terminals.
- * Attach 18-24 AWG stranded wire using Molex tool #11-01-0197.
- * 4 mating connectors are provided with each supply
- * 14V output active @ AC ON (for use with fan)
- * 14VS output active @ 384 output on (for use with ViPAC array only)

OUTPUTS I THRU 4

384 VDC - E/D 14VDC




Interface Connections

- * J5-1 to the Signal Ground.
- * J5-2 provides over temperature status
- * J5-3 is A/C O.K.
- * J5-9 are Enable/disable for cards 1 -4 respectively
- * J5-10 is General Shutdown
- * J5-12 is +5Vdc
- * Use mating receptable Molex 50-57-9412 with terminals Molex 16-02-0097
- * Attach terminals to 24 - 30 AWG stranded wire.

CBJ5	
(ENABLE/DISABLE)	
PIN	DESCRIPTION
1	SIGNAL GROUND
2	OVER TEMP
3	AC - OK
4	N/C
5	N/C
6	E/D-4
7	E/D-3
8	E/D-2
9	E/D-1
10	GENERAL SHUT DOWN
11	N/C
12	+5VDC

PFC FrontEndMechanical Drawings

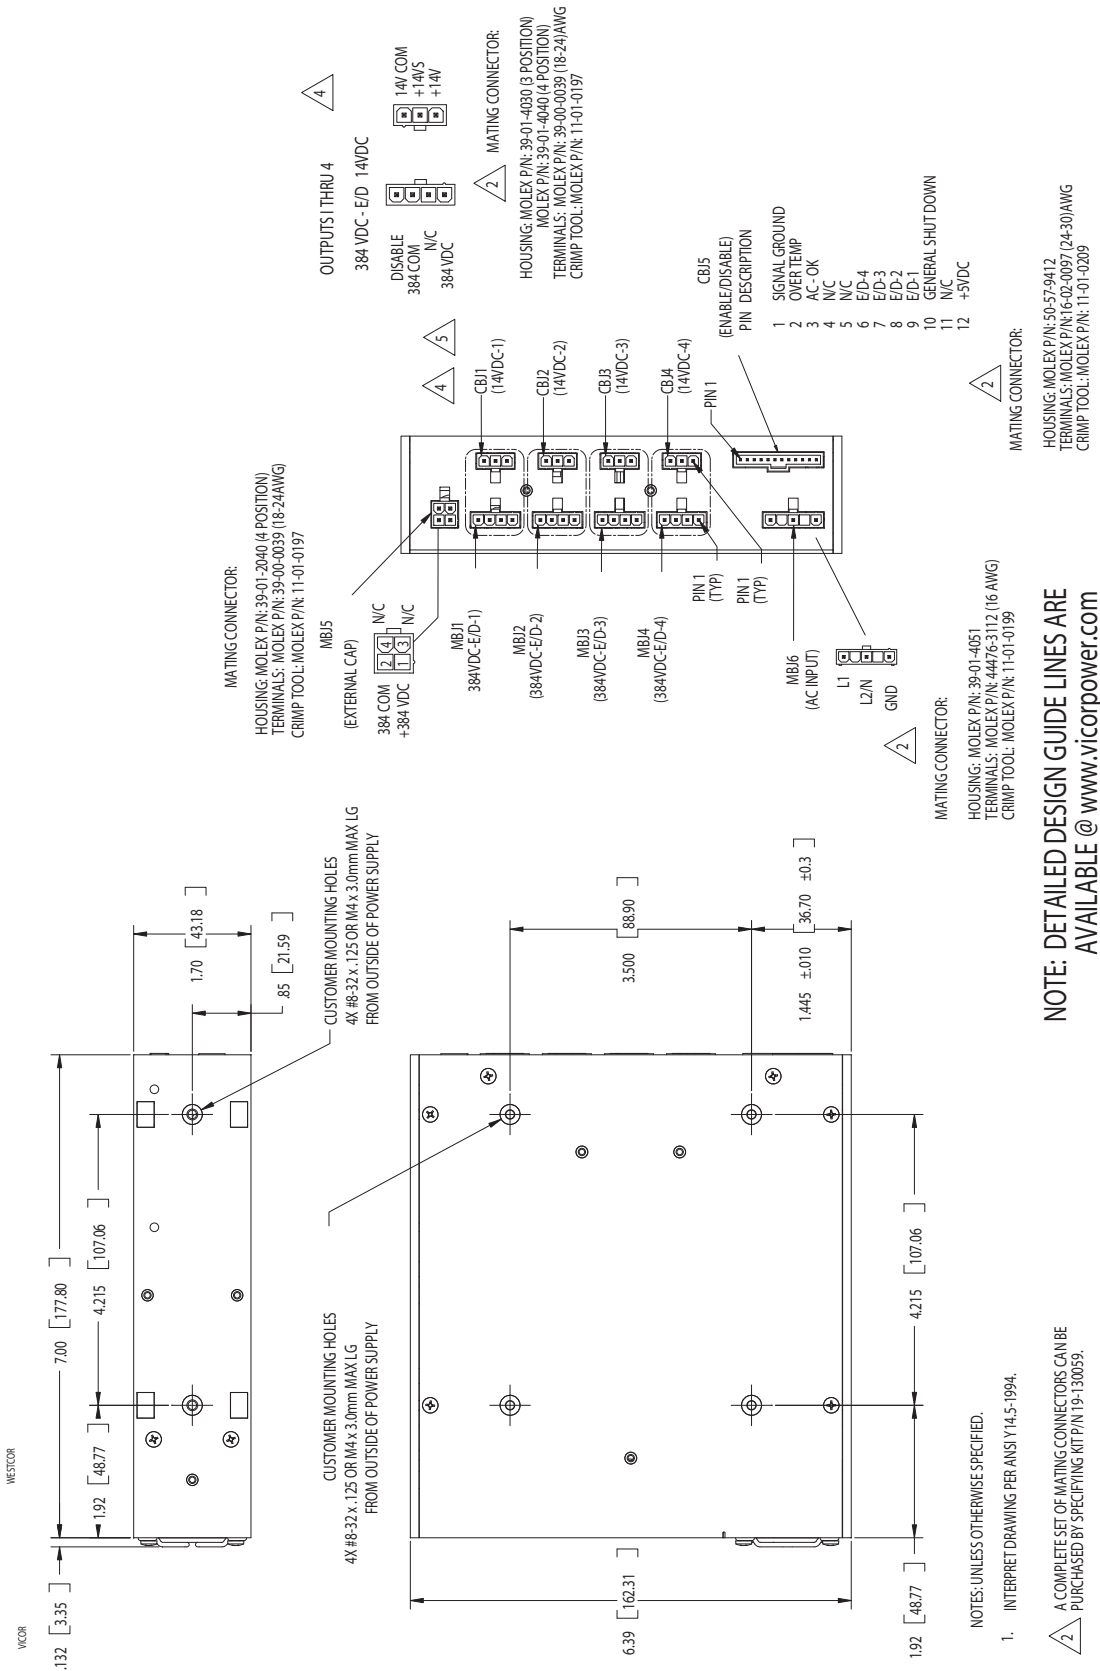


MATING CONNECTOR:
 HOUSING: MOLEX P/N: 39-01-4051
 TERMINALS: MOLEX P/N: 44476-3112 (16 AWG)
 CRIMP TOOL: MOLEX P/N: 11-01-0199

MATING CONNECTOR:
 HOUSING: MOLEX P/N: 50-57-9412
 TERMINALS: MOLEX P/N: 6-02-0097 (24-30)AWG
 CRIMP TOOL: MOLEX P/N: 11-01-0209

NOTE: DETAILED DESIGN GUIDE LINES ARE AVAILABLE @ www.vicorpower.com

- NOTES: UNLESS OTHERWISE SPECIFIED.
1. INTERPRET DRAWING PER ANSI Y 14.5-1994.
 2. A COMPLETE SET OF MATING CONNECTORS CAN BE PURCHASED BY SPECIFYING KIT P/N 19-130059.
 3. DIN RAIL KIT CAN BE PURCHASED BY SPECIFYING KIT P/N 19-130060.
 4. CONNECTIONS FOR OUTPUTS 1 THRU 4 ARE IDENTICAL.
 5. 14VDC CAN BE USED TO POWER FANS.

Mounting the PFC FrontEnd with DIN Rail

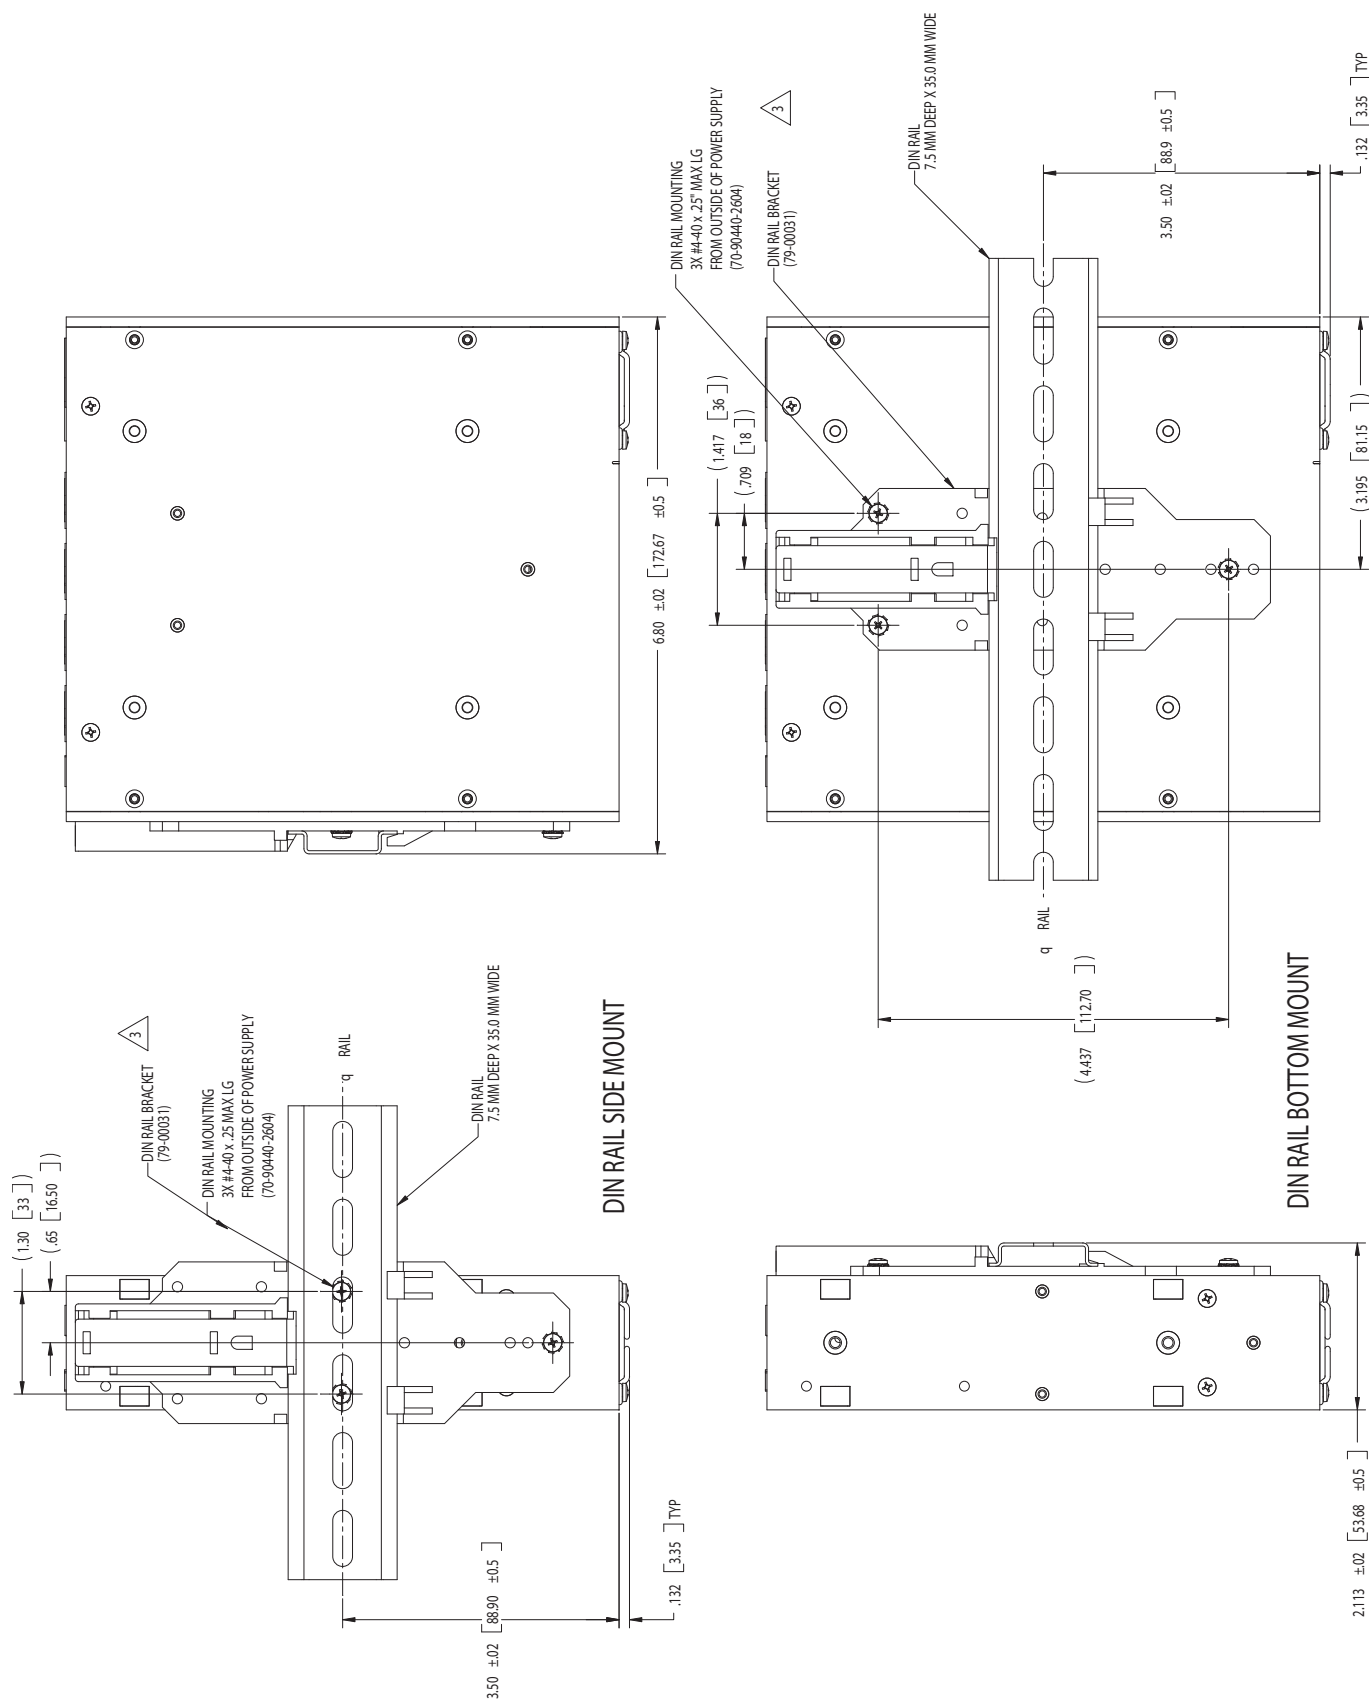

Interface Connections

Chassis Input Power Terminals (MBJ6)

Input AC power is applied through connector MBJ6 using Molex mating connector 39-01-4051. Use 16 AWG wire with socket pin 44476-3112 and crimp tool 11-01-0199.

A fault clearing device, such as a fuse or circuit breaker, with a maximum 12A rating at the power supply input is required for safety agency compliance. It should be sized to handle the start-up inrush current of 2A at 115 Vac and 5.5A at 230 Vac.

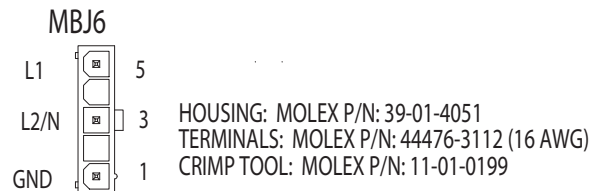


Figure 2 - Input Power Terminals

Output Power Connections (MBJ1 - 4)

Outputs terminate in a Molex connector. These outputs are not isolated.

These 4 outputs all connect to the common 384V output bus and provide easy modular connectivity. They also house 4 separate control lines that provide disable and enable for Vicor DC-DC converters connected to the PFC FrontEnd. Upon start-up, all 4 of these lines are held low to disable the external converters until the PFC FrontEnd comes up properly. After that, control of this function is handed over to the input lines E/D 1-4. Please note that any external load, whether a Vicor module or other, must be disabled during the startup phase.

Individual outputs may be connected to more than one module to form output arrays. Each control line can enable/disable upto 3 separate modules. Larger arrays may be possible through the use of external relays or transistor circuits. Please contact Applications Engineering for assistance in these cases.

In order to minimize parasitic cable inductance and reduce EMI, the output power cables should be routed in close proximity to one another, and large current loops should be avoided. To avoid excessive voltage drop, do not undersize power cables, especially for high current outputs. Excessive cable inductance coupled with large capacitive loading can introduce instability in switching power supplies. This problem can be avoided with proper system design. Consult Vicor's Applications Engineering Department for assistance with applications that use long cable lengths and excessive load capacitance.

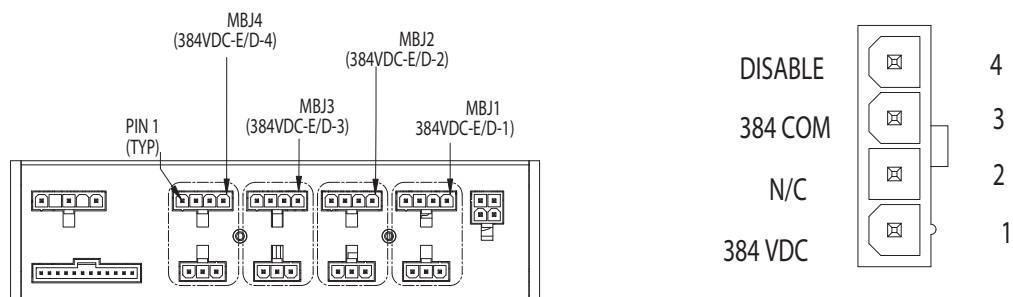


Figure 3 - Output Power Connections

Signal Ground (J1-3, J2-3, J3-3, J4-3)

J1-J4 are for ED1-ED5 interface signal

Over temperature protection (J5-2)

The PFC FrontEnd monitors the internal heatsink temperature to provide several functions

- Variable fan speed. Minimum fan speed occurs at 24C and lower as measured on the heatsink. Maximum fan speed occurs at 70C and above
- Over temperature shutdown. If the heatsink reaches 90C +/- 5C the Over Temp indicator signal (pin 2 on CBJ5), which is normally low, will assert high to indicate an overtemperature condition . Also, all individual module control lines on MBJ1-4 will go low to disable the output loads. The supply will re-enable when the heatsink temperature drops below approximately 83C and the overtemperature indicator will reset to a low condition.

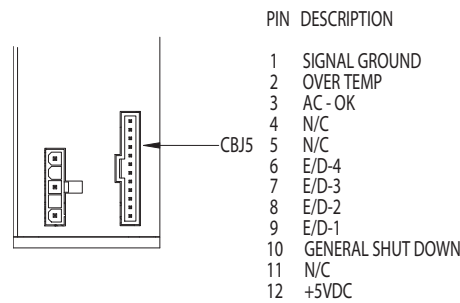


Figure 4 - Over temperature protection

AC OK (J5-3)

AC OK is an active high TTL compatible signal and provides a status indication of the AC input power. It is on pin J6 and is capable of sinking 16 mA minimum. This signal switches to a TTL "1" when the high voltage bus exceeds low-line condition during turn-on. Upon loss of input power, the bus voltage will drop, causing the AC OK signal to go low. A minimum of 3 ms holdup time is provided for a 1,200W load following the loss of the AC OK signal.

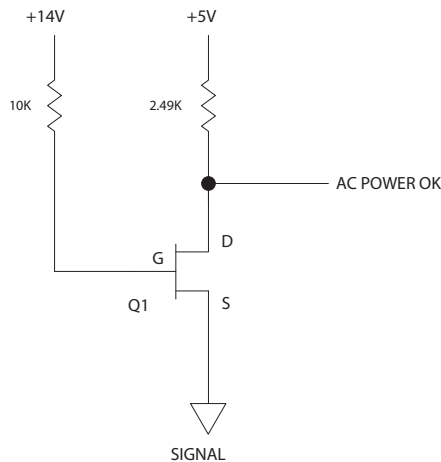


Figure 5 - AC OK

Enable/Disable (J5-6 to J5-9)

The Enable/Disable control pins allow connected converter outputs to be sequenced either on or off. The Enable/Disable pins should be pulled low to less than 1V with respect to Signal Ground to disable the outputs. They will source 10mA maximum. These pins should be open circuited or allowed to exceed 4.5V when enabled. Do not apply more than 5V to these inputs.

General Shutdown/GSD (J5-10)

The GSD control pin on J5-10 allows simultaneous shutdown of all attached converter outputs. This pin must be pulled down to less than 0.7V, and will source 4mA maximum to shut down all outputs. The GSD pin should be open circuited or allowed to exceed 4.5V when not in use, or when the outputs are to be enabled. Do not apply more than 5V to this input at any time. Normal open circuit voltage is 1.5 to 3V with respect to Signal Ground.

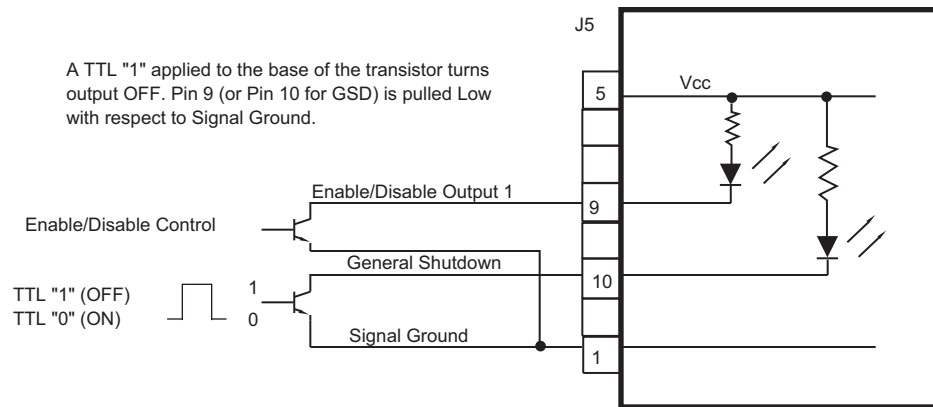


Figure 6 - Enable/Disable and General Shutdown

Auxiliary Vcc +5Vdc (J5-12)

The Vcc on J5-12 is an auxiliary 5V regulated power source. It is +5 Vdc +/-5% with respect to Signal Ground and can supply 300 mA maximum. It is short-circuit-proof, but if shorted, all outputs will shut down through the Enable/Disable circuitry.

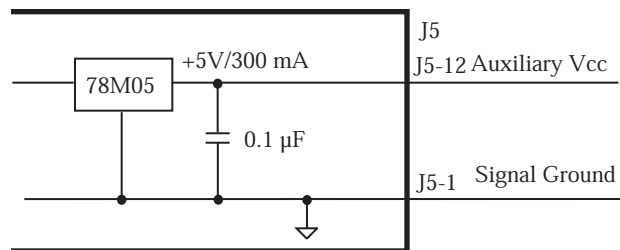


Figure 7 - Auxiliary Vcc


Optional ViPAC Array Adaptor (refer to connection drawing on the following page)

The ViPAC Array Adapter provides plug and play compatibility between the PFC FrontEnd and any 375V ViPAC Array while continuing to meet safety and emissions specifications. Up to 4 adapters and arrays may be used with one PFC FrontEnd, enabling as many as 16 separate isolated DC outputs from the system.


To ensure proper grounding when connecting a ViPAC Array to the PFC FrontEnd, please use the grounding wire and lug bundled with the P1 and P2 connectors of the ViPAC Array Adapter. Ground connection holes are located between the output and auxiliary power connectors of the PFC FrontEnd as shown in figureX . Use a 4-40 screw with a maximum protrusion of .125". Ground will be provided to the ViPAC array adapter through molex connector P3



PFC FrontEnd Connection to Vicor Modules


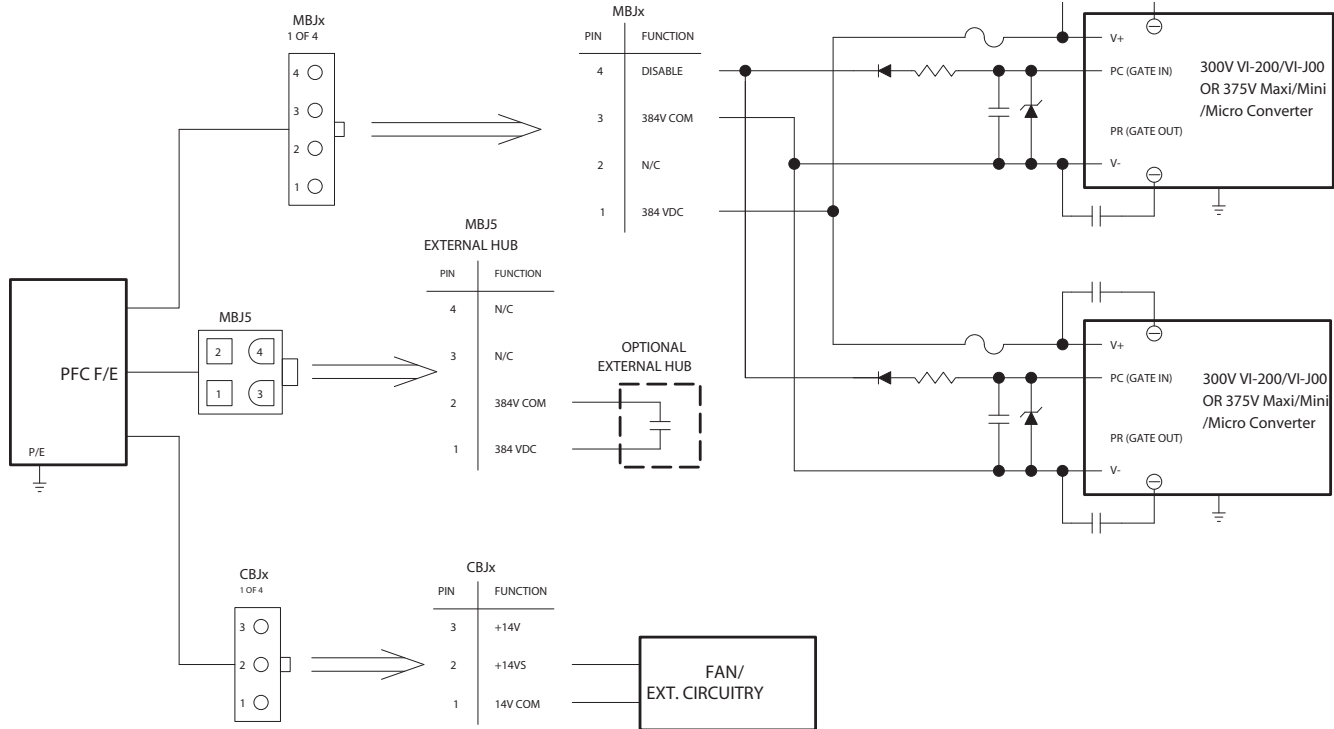


PFC FrontEnd Connection to ViPAC Array

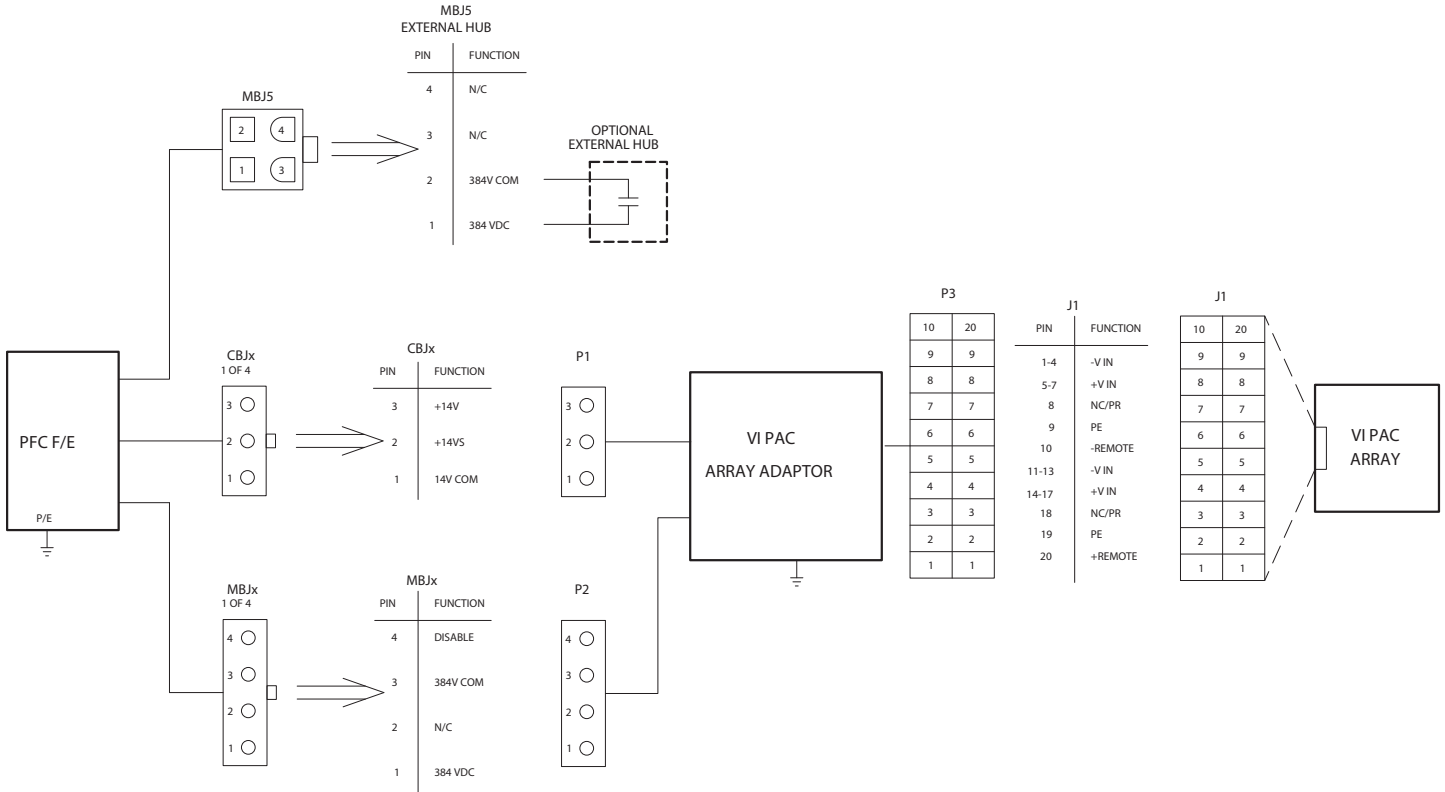

Optional ViPAC array adaptor available (#19-130064)

PFC FrontEnd Output Power vs. Input Voltage

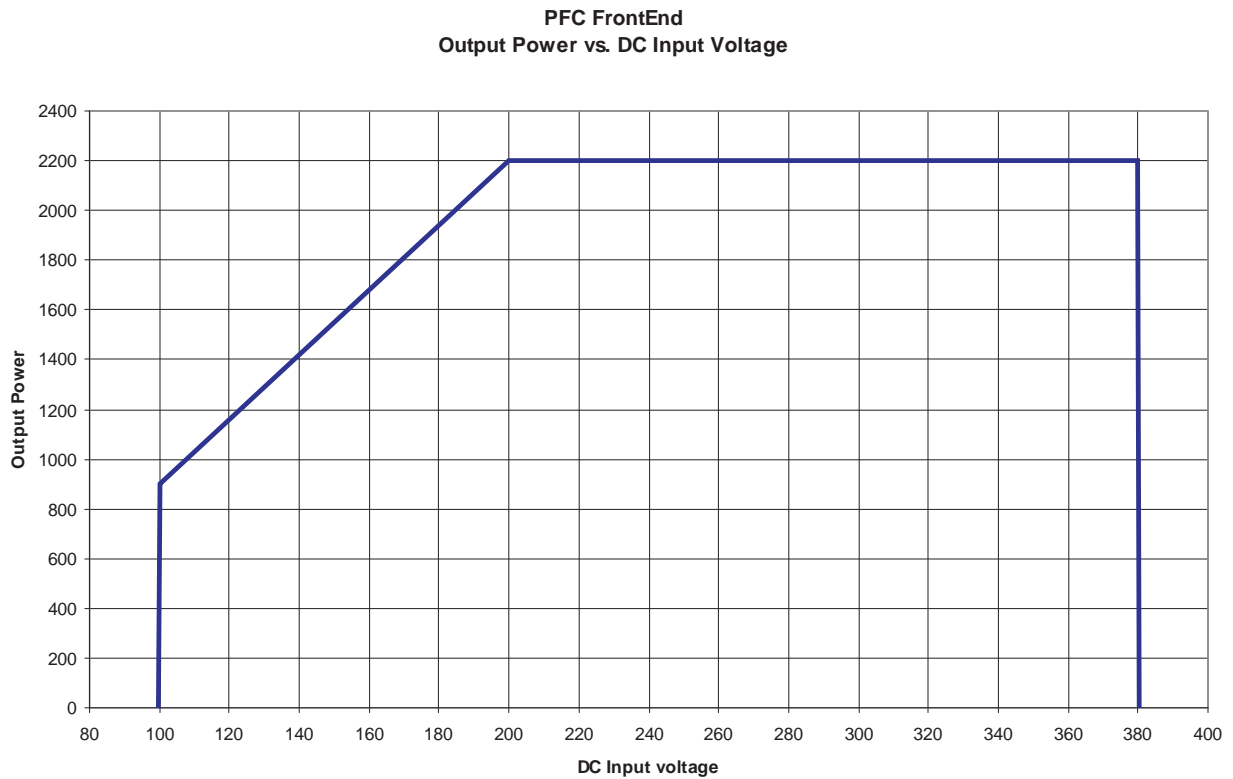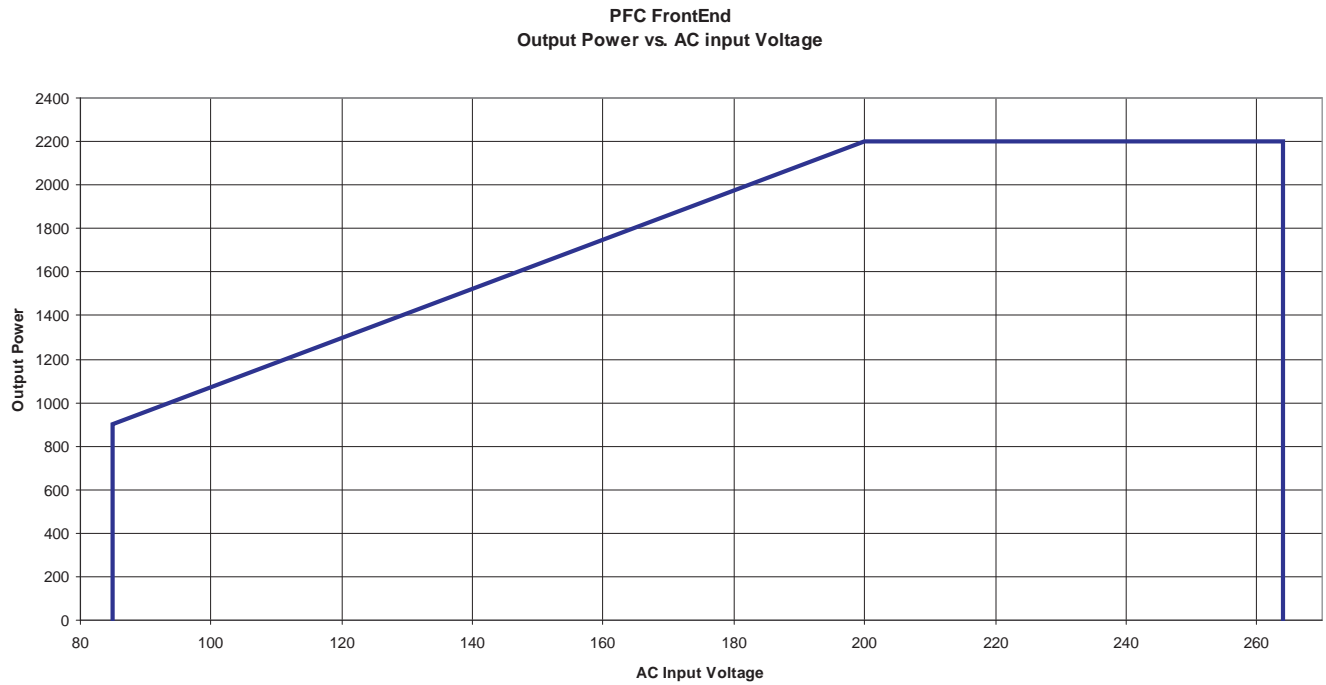

Specifications (Typical at 25°C, nominal line and 75% load, unless otherwise specified)**GENERAL**

Number of Outputs (unisolated)	Up to 4. Additional using “Y” adapters”
Efficiency	> 90% minimum
Safety Approvals	cTÜVus, CE MARKING
Vibration	Meets Mil-Std-810E, Category 10, Minimum Integrity test
Output voltage	384 V (± 3%) non-isolated
Maximum Output Power⁺	1,100W @ 115 Vac; (900W @ 85-100Vac) 2,200W @ 230 Vac (1,900 @ 180 - 200Vac)
Start-up time	Nominal 800mSec; Worst case 6Sec. after extended soak @ 65°C

⁺ Note: Not to exceed an input current of 12A.

INPUT

Input	85-264 Vac, 47-800Hz 100-380 Vdc
Inrush Current	2A pk @ 115 Vac; 3.5A pk @ 230 Vac
Conducted EMI	EN 55022 Class A
Power Factor	0.99@ 115Vac: 0.95 @230Vac
Voltage Fluctuations and Flicker	EN61000-3-3
ESD Susceptibility	EN61000-4-2, Level 3, Performance Criteria A
RF Radiated Immunity, 10v/m	EN61000-4-3, Performance Criteria A
Transient Burst Immunity	EN 61000-4-4, Level 3, Performance Criteria A
Surge Immunity	EN 61000-4-5 Installation Class 3, Performance Criteria A
RF Conducted Immunity	EN61000-4-6, limit Class 3 Performance Criteria A
Voltage Dips and Interrupts	EN61000-4-11
Dielectric Withstand	Primary to Chassis GND = 2,121 Vdc

ENVIRONMENTAL

Storage Temperature	-40°C to +85°C
Operating Temperature	
Full Power	-20 to +45 °C
Half Power	-20 to +65 °C
Altitude	Derate 2.6% total output power for each 1,000 ft to a maximum operating altitude of 15,000 ft. Non-operating storage maximum altitude is 40K. 75% maximum load
Humidity	0 to 95% non condensing
Product Weight	5.0 lbs. (2,3 kg)
Dimensions	1.72" H (43,6mm) x 6.4" W (162,6mm) x 7" L (177,8mm)
Warranty*	2 years limited warranty. See vicorpower.com for complete warranty statement.

* Opening, repairing or modifying the unit will void the warranty. If you have any problem with the power supply, please contact Customer Service at 1-800-735-6200. If the unit needs to be returned for inspection/analysis, an RMA number will be issued. All units must have a RMA number prior to return.

VICOR GLOBAL OFFICES

USA

**Vicor Corporation,
Corporate Headquarters**
25 Frontage Road
Andover, MA 01810
Tel: 800-735-6200
Tel: 978-470-2900
Fax: 978-475-6715

Vicor Corporation
377 E. Butterfield Road
Suite 201
Lombard, IL 60148
Tel: 630-769-8780
Fax: 630-769-8782

Vicor, Westcor Division
560 Oakmead Parkway
Sunnyvale, CA 94085
Tel: 408-522-5280
Fax: 408-774-5555

EUROPE

Vicor France
Tel: 33-1-3452-1830
Free Phone
France Only:
0800 419 419
Fax: 33-1-3452-2830
Email: vicorfr@vicr.com

Vicor Italy
Tel: +39-02-2247-2326
Free Phone *Italy Only:*
800-899-677
Fax: +39-02-2247-3166
Email: vicorit@vicr.com

Vicor Germany
Tel: +49-89-962439-0
Free Phone
Germany Only:
0800 018 29 18
Fax: +49-89-962439-39
Email: vicorde@vicr.com

Vicor U.K.
Tel: +44-1276-678-222
Free Phone *UK Only:*
0800-980-8427
Fax: +44-1276-681-269
Email: vicoruk@vicr.com

ASIA-PACIFIC

Vicor Hong Kong
Tel: +852-2956-1782
Fax: +852-2956-0782

Vicor Japan Co., Ltd.
Tel: 81-3-5487-3880
Fax: 81-3-5487-3885

For more information about this or other Vicor products, or for assistance with component-based power system design, contact the Vicor office nearest you. **Westcor's product line includes:**

LOPAC FAMILY:

- PFC MicroS
- PFC Micro
- PFC Mini

MEGAPAC FAMILY:

- PFC MegaPAC
- PFC MegaPAC (Low Noise/High Power)
- 4kW MegaPAC
- PFC MegaPAC-EL (Low Noise)
- Mini MegaPAC
- 4kW MegaPAC-EL (Low Noise)
- PFC MegaPAC (High Power)
- Autoranging MegaPAC
- ConverterPACs

OTHERS:

- FlatPAC-EN
- PFC FrontEnd

**Configure your own Westcor power supply online
using the VSPOC configurator tool available on vicorpower.com!**

Information furnished by Vicor is believed to be accurate and reliable. However, no responsibility is assumed by Vicor for its use. No license is granted by implication or otherwise under any patent or patent rights of Vicor. Vicor components are not designed to be used in applications, such as life support systems, wherein a failure or malfunction could result in injury or death. All sales are subject to Vicor's Terms and Conditions of Sale, which are available upon request.

Specifications are subject to change without notice. *The latest data is available on the Vicor website at vicorpower.com*



www.westcorpowers.com